

FASTER GROUPS LISTED BELOW ARE USED FOR ASSEMBLY AND INSTALLATION. **SOME ASSEMBLY DRILLING IS REQUIRED.** PARTITION INSTRUCTIONS & FASTENERS ARE WITH THAT UNIT. USE KD UNIT DRAWINGS TO IDENTIFY THEIR SEPARATE PARTS. CUSTOMER-SPECIFIED SHELF DIMENSIONS ARE SHOWN HERE.


ADRIAN STEEL CO.
 906 JAMES STREET
 ADRIAN, MI 49221
 517/265-6194

DWR/CAB MOD

DWG. BY: **ECW# 6071** DATE: **6/8/02** CHK BY: **S/L MD505** PACKAGE # **A**
 REF: **10233**
 PACKAGE WEIGHT: **143.69 #** HCG: **18** VCG: **18**

SYM.	FASTENERS	QTY	DRILL
●	ASSEMBLY FASTENERS { 1/4-20 x 1/2" THP.SCW } (18) { 1/4-20 HX. FLANGE NUT } (18)		9/32
●	INSTALLATION FASTENERS { 1/4-20 PLUSNUT "PB" } (4) { 1/4-20 x 1" HH.SCW.FT } (4) { 1/4 PLN WASH } (4) { 1/4 SPLIT RING L"WASHER } (4)		13/32
●	{ 1/4-20 PLUSNUT "PB" } (6) { 1/4-20 x 1-1/2" HH.SCW.FT } (6) { 1/4 PLN WASH } (6) { 1/4 SPLIT RING L"WASHER } (6)		13/32
●	{ 1/4 PLN. WASHER } (6) { 1/4-20 HX.STOP NUT } (3) { 1/4-20 x 1-1/2" HH.SCW.FT } (3) { 1/2 PLN. WASHER } (3)		9/32

ITEM	PART NO.	DESCRIPTION	QTY.
1	12	CABINET W/SHELF	2
2	MB111	MOUNTING BRACKET	3
3	2	4-DRAWER MEDIUM	2

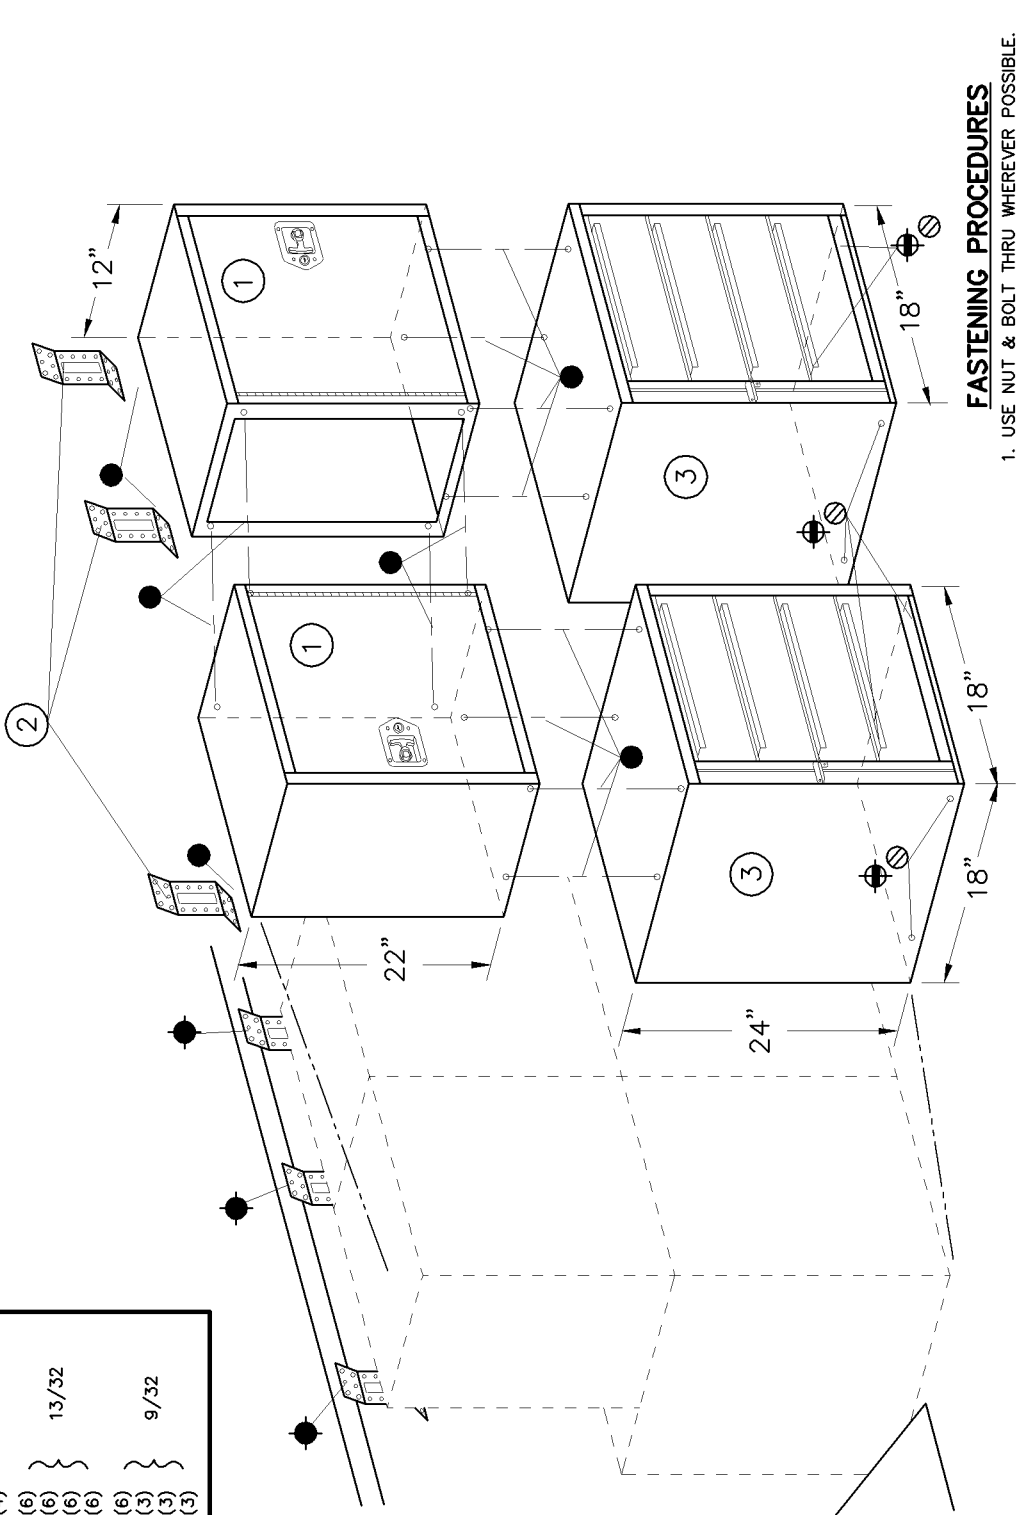

CAUTION:
 DRILL THRU FLOOR WITH CARE
 WATCH FOR GAS TANK, CONTROL
 LINES, & ELECTRICAL WIRING.

FASTENING PROCEDURES

1. USE NUT & BOLT THRU WHEREVER POSSIBLE.
2. USE PLUSNUTS FOR BLIND FASTENING.
3. USE SHEET METAL SCREWS IN SHEAR ONLY.