

No Drill Ford Transit Hardware Kit - Installation Guide




Materials Needed:

- Legend Flooring
- Legend Floor Bracket Hardware Kit:
 - o 6x D-Ring Floor Brackets
 - o 32x M6 Threaded Inserts
 - o 32x M6 Bolts
- Electric Drill
- 23/64" Drill bit
- 6mm Allen Key
- 10mm Hex driver bit
- Driver bit to fit OEM Bolt


IMPORTANT: If installing shelving, follow steps 3 and 4 in this guide, and use the extra hardware included in the hardware kit. When completed, finalize your shelving install by securing it to the van wall or ceiling, according to the shelving manufacturer instructions.

Step 1: Remove OEM D-Ring and Bolt. Save the bolt for Step 5.

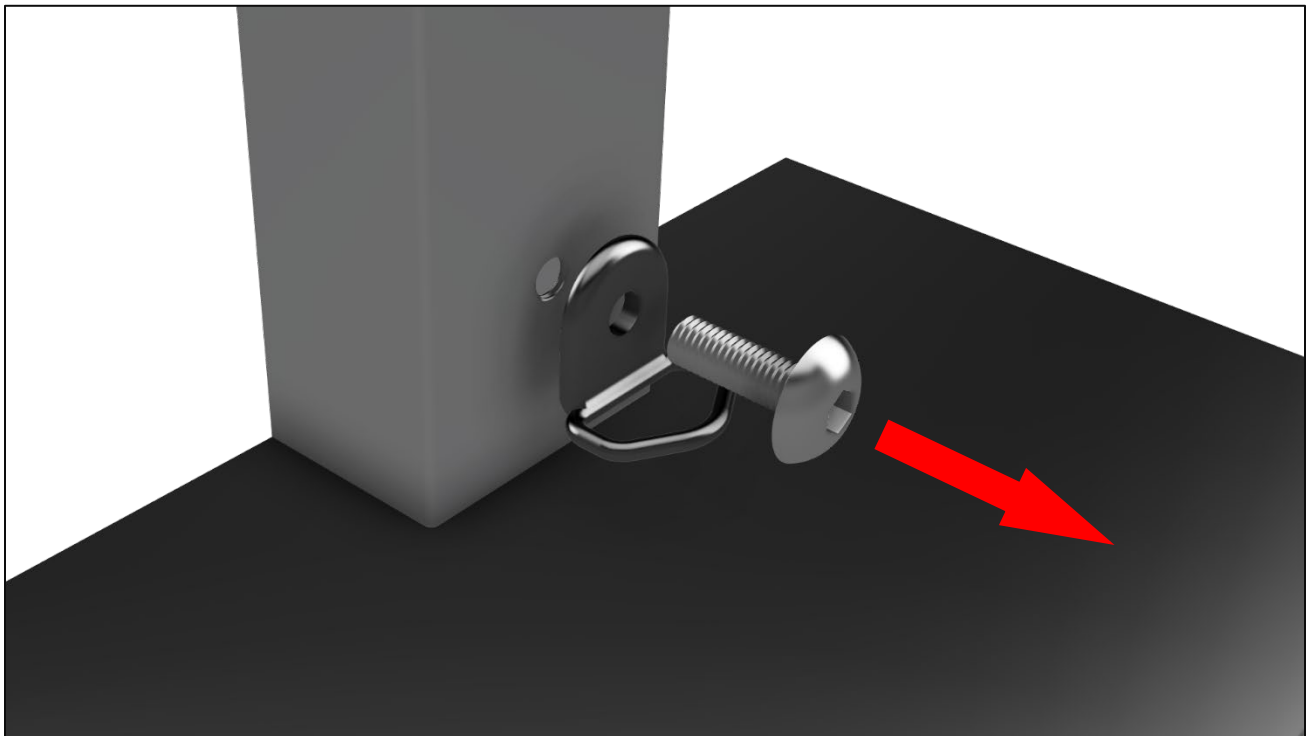




Step 2: Dry fit the flooring and bracket and mark the locations of the bolt holes.

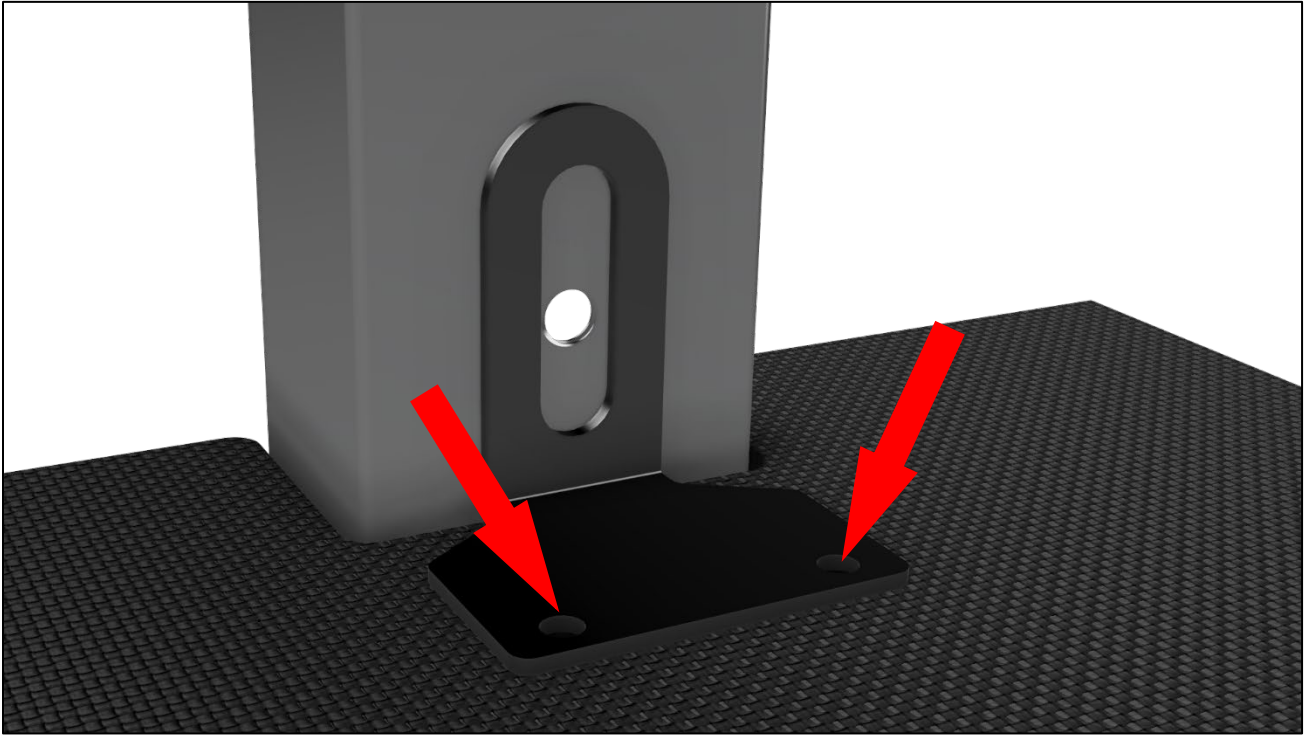


Step 3: Drill two 23/64" holes through the flooring, using the markings from step 2, and screw the provided M6 threaded inserts into the top side of the flooring, using the 6mm Allen key.

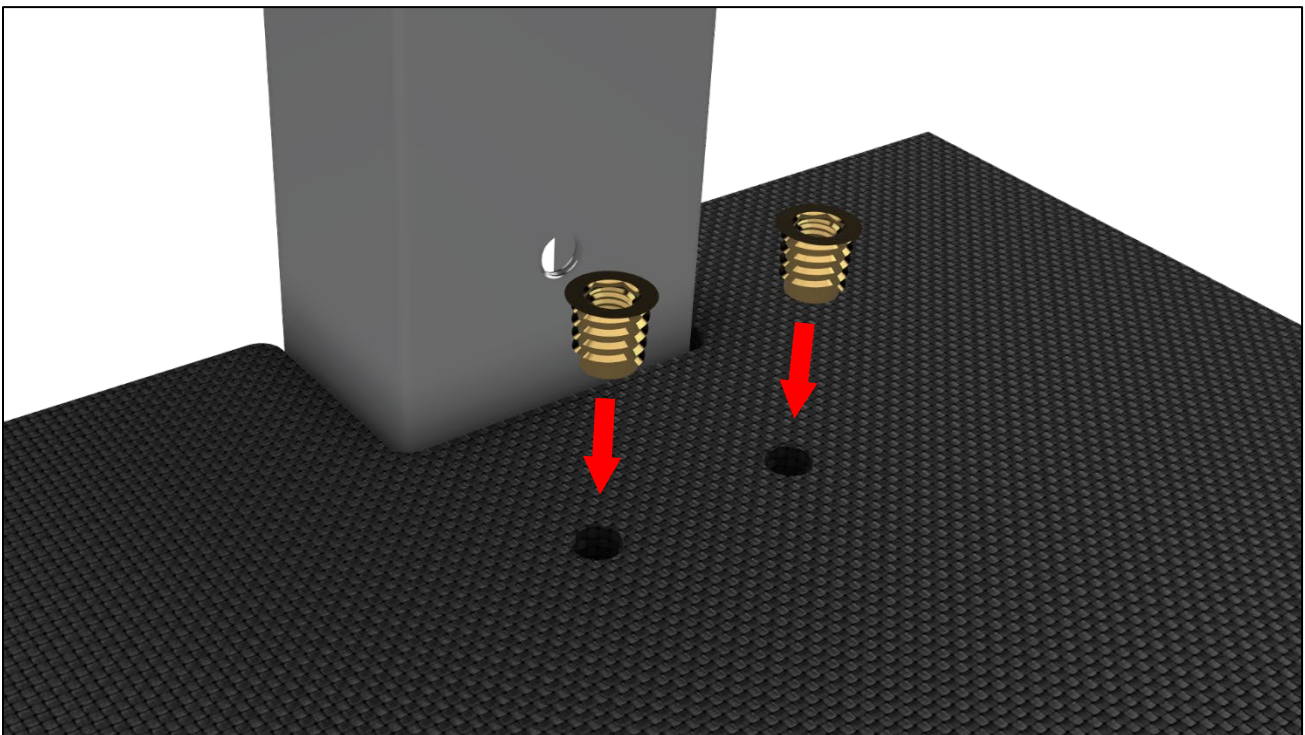



Step 4: Attach bracket to flooring using provided M6 bolts, using the 10mm Hex driver bit.

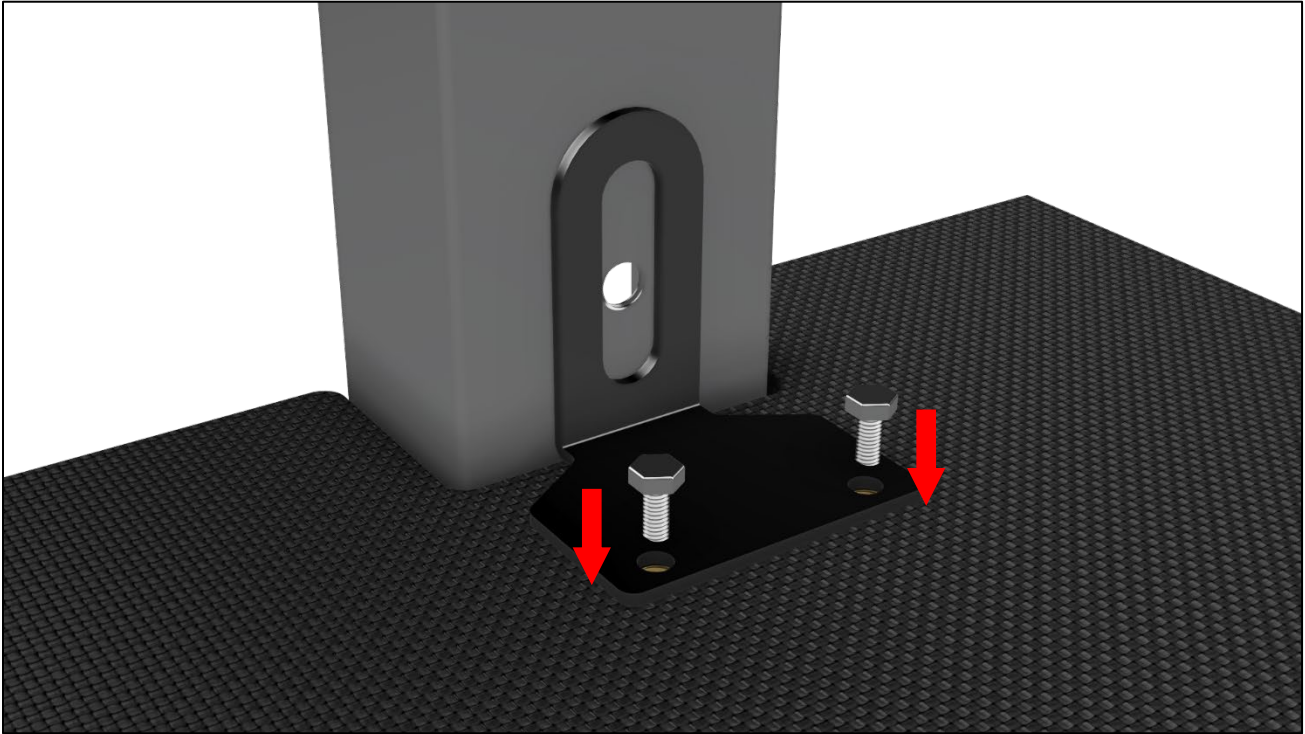

Step 5: Attach Bracket to vehicle frame using the OEM bolt from Step 1.

